

Annexure IIIA						
SN	SPN	PART NO.	MACHINE	DESCRIPTION	DRG. NO.	SPEC NO.
1	2.04.0001.3.01.2	64.08.4007	BCM	Tube of tensioning cylinder of BCM	RDSO/TM/11/14	TM/HM/6/353
2	2.04.0002.3.01.3	62.08.4009	BCM	Piston Rod for tensioning cylinder of BCM	RDSO/TM/12/14	TM/HM/6/354
3	2.04.0003.3.01.4	62.08.4005	BCM	Piston for tensioning cylinder of BCM	RDSO/TM/13/14	TM/HM/6/355
4	2.04.0004.3.01.5	62.08.4008	BCM	Bush for tensioning cylinder of BCM	RDSO/TM/14/14	TM/HM/6/356
5	2.04.0005.3.01.6	W33.205A	Common Tamper	Piston for Brake cylinder of UNO, DUO, WST, UNI, & T-Exp. tamping machine.	RDSO/TM/05/12	TM/HM/6/329
6	2.04.0006.3.01.7	W33.139.3	Common Tamper	Cover for Brake Cylinder of UNO, DUO, WST, UNI, & T-EXP.	RDSO/TM/07/12	TM/HM/6/331
7	2.04.0007.3.01.8	HZ09.GB.100.0300	CSM	Sleeve of Lining Cylinder for CSM	RDSO/TM/09/19	TM/HM/6/430
8	2.04.0008.3.01.9	HZ10.100.045.0420.1	CSM	Piston Rod Complete of Lining Cylinder for CSM	RDSO/TM/10/19	TM/HM/6/431
9	2.04.0009.3.01.1	HZ06.100.045	CSM	Gland of Lining Cylinder for CSM	RDSO/TM/12/19	TM/HM/6/436
10	2.04.0010.3.01.2	HZGB.100.045.0300.1.003	CSM	Yoke of Lining Cylinder for CSM sub assembly	RDSO/TM/13/19	TM/HM/6/437
11	2.04.0011.3.01.3	HZMB.63.036.0180.1	DTS	Yoke of Roller Clamp Cylinder for DTS Machine sub assembly.	RDSO/TM/14/19	TM/HM/6/438
12	2.04.0012.3.01.4	HZGB.063.036.0305.1	UNIMAT	Angular movement cylinder of tamping unit for Unimat	RDSO/TM/05/20 (1OF2) RDSO/TM/05/20 (2OF2)	TM/HM/6/445
13	2.04.0013.3.01.5	HZGB.050.025.0580.1.001	UNIMAT	Hook displacement cylinder of lifting unit for Unimat	RDSO/TM/06/20 (1OF3) RDSO/TM/06/20 (2OF3) RDSO/TM/06/20 (3OF3)	TM/HM/6/446
14	2.04.0014.3.01.6	HZGB.100.045.400.1.015	WST	Hydraulic lining cylinder for WST	RDSO/TM/10/20 (1OF2) RDSO/TM/10/20 (2OF2)	TM/HM/6/470
15	2.04.0015.3.01.7	2E36.452	CSM,DUO & T-Exp	Piston rod for Tamping cylinder of CSM,DUO & Tamping Express	RDSO/TM/17/20	TM/HM/6/480
16	2.04.0016.3.01.8	HZGB.125.050.0500.1	DUO	Track lifting cylinder of Duomatic	RDSO/TM/14/20 (1OF2) RDSO/TM/14/20 (2OF2)	TM/HM/4/477
17	2.04.0017.3.01.9	HZGB.100.050.0400.1	CSM	Tamping unit sliding cylinder of CSM	RDSO/TM/15/20 (1OF2) RDSO/TM/15/20 (2OF2)	TM/HM/6/478
18	2.04.0018.3.01.1	HZMB.100.045.0540.2.001	UNIMAT	Hydraulic cylinder for lining of Unimat	RDSO/TM/11/20 (1OF2) RDSO/TM/11/20 (2OF2)	TM/HM/6/471
19	2.04.0019.3.01.2	HZGB.125.050.0330.1	CSM	Track Lifting Cylinder for CSM	RDSO/TM/16/20 (1OF2) RDSO/TM/16/20 (2OF2)	TM/HM/6/479
20	2.04.0020.3.01.3	HZQB.050.036.0600.1.002	CSM	Acceleration Cylinder for CSM	RDSO/TM/12/20 (1OF2) RDSO/TM/12/20 (2OF2)	TM/HM/6/472

21	2.04.0021.3.01.4	HZGB.125.050.0435.1.001	UNIMAT	Track Lifting Cylinder for Unimat-3S &4S	RDSO/TM/13/20 (1OF2) RDSO/TM/13/20 (2OF2)	TM/HM/6/473
22	2.04.0022.3.01.5	HZMB.063.040.0410.1.001	UNIMAT	Lifting unit axial movement cylinder of Unimat-3S	RDSO/TM/01/21	TM/HM/6/486
23	2.04.0023.3.01.6	HZGB.063.036.0580.1	UNIMAT	Tamping unit sliding cylinder of Unimat	RDSO/TM/02/21 (1OF2) RDSO/TM/02/21 (2OF2)	TM/HM/6/487
24	2.04.0024.3.01.7	UD19.286	T-EXP	Cover plate for Squeezing Cylinder male of Tamping Express	RDSO/TM/04/21	TM/HM/6/489
25	2.04.0025.3.01.8	W37.2054B	Unimat	Piston Rod for Tamping Cylinder of Unimat	RDSO/TM/16/21	TM/HM/6/501
26	2.04.0026.3.01.9	2E35.306	CSM, DUO & T-Exp	Piston rod for squeezing cylinder (small) of CSM, DUO & T-Exp	TM/0536 Rev-1	TM/HM/6/227 Rev-1
27	2.04.0027.3.01.1	WN102.30h8.99.8.1	UNIMAT	Pin for Hydraulic cylinder of Unimat	RDSO/TM/02/22	TM/HM/6/513
28	2.04.0028.3.01.2	WN107-20e8.70.5.5.2	UNIMAT	Pin for hydraulic cylinder of Unimat	RDSO/TM/03/22	TM/HM/6/514
29	2.04.0029.3.01.3	UD50.207	Unimat & T-Exp	Head rest for wheel support cylinder of Unimat & T-Exp	RDSO/TM/05/22	TM/HM/6/515
30	2.04.0030.3.01.4	HZ10.080.045.0350.2	UNIMAT	Piston rod complete of hook UP/DN cylinder	RDSO/TM/04/24	TM/HM/6/554
31	2.04.0031.3.01.5	HZ10.100.045.0500.2	UNIMAT	Piston rod complete lining cylinder	RDSO/TM/05/24	TM/HM/6/555
32	2.04.0032.3.01.6	HZ10.080.036.0210.2	UNIMAT	Piston rod complete of Bogie tension cylinder	RDSO/TM/06/24	TM/HM/6/556
33	2.04.0033.3.01.7	WN 107.45h7.139.8.5.1	UNIMAT	Pin for Hydraulic Cylinder of UNIMAT	RDSO/TM/09/24	TM/HM/6/559
34	2.04.0034.3.01.8	WN 107.25e8.70.5.5.1	UNIMAT	Pin for Hydraulic Cylinder of UNIMAT	RDSO/TM/10/24	TM/HM/6/560
35	2.04.0035.3.01.9	HY-40-73A	DUO, CSM & T.Exp	Throtal for tamping unit up down Cylinder DUO, CSM & T.Exp	RDSO/TM/17/24	TM/HM/6/567
36	3.03.0001.3.01.2	PN2-ZG-100X25X400	CSM	Yoke for Pneumatic Cylinder of CSM	RDSO/TM/05/19	TM/HM/6/428
37	5.02.0001.3.01.3	NA	Common Tamper	Foundation block for Main Gear Box.	TM/0301	TM/HM/6/112
38	5.02.0002.3.01.4	Part No. UD72.06	T-Exp, CSM & Duo	Cover for reducing gear box of T-Exp, CSM & Duomatic	RDSO/TM/16/19	TM/HM/6/440
39	5.02.0003.3.01.5	HY-40.25	DUO	M.S. Foundation for Hyd. Pump of Duomatic	RDSO/TM/14/24	TM/HM/6/564
40	5.03.0001.3.01.4	UD63.1014	Common Tamper	Slider for Axle Gear of CSM	TM/0304	TM/HM/6/115
41	5.03.0002.3.01.5	UD.64.1311	Common Tamper	Gear with Fork	TM/010/06	TM/HM/6/296
42	5.03.0003.3.01.6	UD63.1204	CSM	Shaft for satellite gear box of CSM.	RDSO/TM/31/17	TM/HM/6/410
43	5.03.0004.3.01.7	U64.1302E	CSM	Gear Wheel (Satellite Gear Box) for Track Tamping (09-32-CSM) .	TM/9614	TM/HM/6/97
44	5.03.0005.3.01.8	U64.1303	CSM	Gear Wheel Pinion for (09-32-CSM)	TM/9615	
45	5.03.0006.3.01.9	PB61.472	Duomatic	Intermediate shaft for drive axle of Duomatic	RDSO/TM/20/22	TM/HM/6/529
46	5.03.0007.3.01.1	UD-214.1508	UNIMAT & T.EXP	Fork for Brake Cylinder of UNIMAT & T.EXP	RDSO/TM/11/24	TM/HM/6/561
47	5.04.0001.3.01.5	2E.71.07	Common Tamper	Flange for main Gear Box	TM/0305	TM/HM/6/116
48	5.04.0002.3.01.6	1238.309.067	Common Tamper	Selector Housing Cover	TM/0306	TM/HM/6/117
49	5.04.0003.3.01.7	UD71.713ST	WST	Cover for Intermediate Shaft-DUO/UNO	TM/0309	TM/HM/6/120

50	5.04.0004.3.01.8	UD64.908	Common Tamper	Cover Plate for Housing of differential Gear Box	TM/0310	TM/HM/6/121
51	5.04.0005.3.01.9	PB61.473	CSM	Closing Cover for Intermediate shaft for CSM	TM/0311	TM/HM/6/122
52	5.04.0006.3.01.1	PB61.474	Common Tamper	Cardan Shaft Flange of Drive Axle Gear Box	TM/0317	TM/HM/6/123
53	5.04.0007.3.01.2	2E71.09	Common Tamper	Bracket	TM/0318	TM/HM/6/124
54	5.04.0008.3.01.3	G70.71A	WST	Cover Plate for Main Gear Box –DUO	TM/0441	TM/HM/6/177
55	5.04.0009.3.01.4	UD.236.3001-5	Common Tamper	Cover for Measuring Bogie Wheel	TM/0449	TM/HM/6/185
56	5.04.0010.3.01.5	DL63.316	Common Tamper	Flange for axle gear box	TM/0590	TM/HM/6/280
57	5.04.0011.3.01.6	UD75.355	Common Tamper	Cardan Shaft Flange of Main Gear Box	TM/0595	TM/HM/6/285
58	5.04.0012.3.01.7	UD64.1019	WST	Cover plate for tail pinion of Duomatic	RDSO/TM/04/17	TM/HM/6/386
59	5.04.0013.3.01.8	UD71.1002	UNI	Cover plate for axle of Unimat	RDSO/TM/09/17	TM/HM/6/391
60	5.04.0014.3.01.9	DL63.308	CSM/DTS	Cover for Axle Gear Box of CSM	RDSO/TM/26/17	TM/HM/6/405
61	5.04.0015.3.01.1	UD64.907	CSM	Cover plate for distributor gear box of CSM.	RDSO/TM/29/17	TM/HM/6/408
62	5.04.0016.3.01.2	UD62.2404	CSM	Housing cover for satellite axle of CSM	RDSO/TM/25/17	TM/HM/6/412
63	5.04.0017.3.01.3	UD64.34	CSM	Coupler for funk gear box of CSM	RDSO/TM/21/20	TM/HM/6/482
64	5.04.0018.3.01.4	64.04.519	BCM	Disc for Tumbler/Turret gear box of BCM	RDSO/TM/13/21	TM/HM/6/498
65	5.04.0019.3.01.5	UD76.216	CSM	Flange for driving motor of CSM	RDSO/TM/18/22	TM/HM/6/527
66	5.06.0001.3.01.7	79000.32.49	Common Tamper	Seal Ring Tail Pinion	TM/0303	TM/HM/6/114
67	5.06.0002.3.01.8	UD.62.205	WST	Disc for Axle	TM/0439	TM/HM/6/175
68	5.06.0003.3.01.9	DL61.215	CSM/DTS	Support ring for axle	TM/0528	TM/HM/6/214
69	5.06.0004.3.01.1	DL61.214	CSM/DTS	Support ring for axle	TM/0529	TM/HM/6/215
70	5.06.0005.3.01.2	U61.104	WST	Pin with castle nut for torque support	TM/0531	TM/HM/6/217
71	5.06.0006.3.01.3	UD214.1020	Common Tamper	Pin of Brake assembly	TM/0593	TM/HM/6/283
72	5.06.0007.3.01.4	D216.451	Common Tamper	Sleeve for brake cylinder	RDSO/TM/10/12	TM/HM/6/333
73	5.06.0008.3.01.5	UD21.04	WST	Pin for brake assembly of Duomatic	RDSO/TM/05/17	TM/HM/6/387
74	5.06.0009.3.01.6	UD64.1303	UNI	Spacer for axle gear of Unimat	RDSO/TM/10/17	TM/HM/6/392
75	5.06.0010.3.01.7	UD63.1008	CSM/UNI/D TS	Spacer for satellite gear box of CSM	RDSO/TM/11/17	TM/HM/6/393
76	5.06.0011.3.01.8	2E71.20	Common Tamper	Pin for differential gear box of CSM	RDSO/TM/12/17	TM/HM/6/394
77	5.06.0012.3.01.9	E63.119	Common Tamper	Pin for shock absorber	TM/0539	TM/HM/6/230
78	5.06.0013.3.01.1	UD62.216	Common Tamper	Pin for brake assembly	TM/0540	TM/HM/6/231
79	5.06.0014.3.01.2	UD.210.45	Common Tamper	Pin for brake assembly	TM/0541	TM/HM/6/232
80	5.06.0015.3.01.3	E.69.119	CSM/UNI	Pin for big Shocker for axle bogie 09CSM	TM/0583	TM/HM/6/276
81	5.06.0016.3.01.4	M63.512	CSM	Pin for Satellite Axle Guard of CSM	TM/0579	TM/HM/6/272
82	5.06.0017.3.01.5	UD70.8854	CSM/UNI/ WST	Bolt	TM/002/06	TM/HM/6/288
83	5.06.0018.3.01.6	CU61.5413	Common Tamper	Distance Washer	TM/007/06	TM/HM/6/293
84	5.06.0019.3.01.7	UD63.1013.D-9-46	CSM	Bolt for satellite gear box of CSM	RDSO/TM/26/21	TM/HM/6/510
85	5.06.0020.3.01.8	UD64.906	CSM, UNI & T-Exp	Bearing bush for distributor gear of CSM, UNI & T-Exp	RDSO/TM/27/21	TM/HM/6/511
86	5.06.0021.3.01.9	SU126.2011.2.2	FRM-80	Bearing ring of drive station of FRM-80	RDSO/TM/11/22	TM/HM/6/521

87	5.07.0001.3.01.8	UD.63.1011	CSM/UNI/WST	Axle of Satellite Gear Box of CSM	TM/009/06	TM/HM/6/295
88	5.07.0002.3.01.9	236.3001.8	Common Tamper	Axle for wheel of lining trolley	TM/0588	TM/HM/6/278
89	5.07.0003.3.01.1	UD150.1555	CSM	Axle of lining roller assembly for CSM	RDSO/TM/10/16	TM/HM/6/375
90	5.07.0004.3.01.2	62.13.412	BCM/FRM	Disc for axle bearing of BCM/FRM	RDSO/TM/03/18	TM/HM/6/415
91	5.07.0005.3.01.3	6.04.02.101	VPR Tamping Machine	Power Axle (First) of VPR Tamping Machine (Part no. 6.04.02.101)	RDSO/TM/01/23 Rev-1	TM/HM/6/532 Rev-1
92	5.07.0006.3.01.4	6.04.02.101-04	VPR Tamping Machine	Power Axle (Second) of VPR Tamping Machine	RDSO/TM/02/23 Rev-1	TM/HM/6/533 Rev-1
93	5.07.0007.3.01.5	UD-62-3301	CSM	CSM Satellite or driving bogie axle	TM/0322 Rev-1	TM/HM/6/128 Rev-1
94	5.07.0008.3.01.6	UD62.01	Duomatic tamping machine	Driving axle for Duomatic tamping machine	TM/0324 Rev-1	TM/HM/6/130 Rev-1
95	5.07.0009.3.01.7	CU61.8801	Unimat	Driving axle (front) of Unimat	TM/0325 Rev-1	TM/HM/6/131 Rev-1
96	5.07.0010.3.01.8	CU62.4901	Unimat	Driving axle (back) of Unimat	TM/0326 Rev-1	TM/HM/6/132 Rev-1
97	5.08.0001.3.01.9	UD.236.3001-7	Common Tamper	Wheel for Bogie (sensing wheel)	TM/0448	TM/HM/6/184
98	5.09.0001.3.01.1	2E71.19RT	Common Tamper	Suspension Bracket for Clutch Actuator of DUO	TM/0320	TM/HM/6/126
99	5.09.0002.3.01.2	380.932.117	Common Tamper	Tail pinion housing	TM/0530	TM/HM/6/216
100	5.09.0003.3.01.3	EM160.1005	CSM	Guide for Satellite Gear Box	TM/006/06	TM/HM/6/292
101	5.09.0004.3.01.4	LK62.302	CSM	Body bearing for axle of CSM.	RDSO/TM/30/17	TM/HM/6/409
102	5.09.0005.3.01.5	UD64.1018	Common Tamper	Bearing housing for tail pinion of Duo	RDSO/TM/03/17	TM/HM/6/385
103	5.09.0006.3.01.6	SU1502.208.1.1.6	SBCM	Bearing housing of excavating conveyor of SBCM	RDSO/TM/25/21	TM/HM/6/509
104	5.10.0001.3.01.2	UD.214.1023	Common Tamper	Locking Block for Break Assembly	TM/0429	TM/HM/6/165
105	5.10.0002.3.01.3	D160.52	Common Tamper	Piston rod for brake cylinder	RDSO/TM/09/12	TM/HM/6/332
106	5.10.0003.3.01.4	UD214.1024	Common Tamper	Bolt For Brake assembly	TM/0596	TM/HM/6/286
107	5.10.0004.3.01.5	WN107-25h 11. 52.8.5-1H	CSM/WST	Pin for Brake Bar of CSM/WST	RDSO/TM/24/24	TM/HM/6/FRS/004
108	5.10.0005.3.01.6	WN107-25 h 11. 89. 8.5-1H	CSM/WST	Pin for Brake Bar of CSM/WST	RDSO/TM/25/24	TM/HM/6/FRS/005
109	6.01.0001.3.01.3	2E33.21	CSM/WST	Squeezing Cylinder (Small Female) of DUO& CSM 09-32.	RDSO/TM/011/07 Rev-1	TM/HM/6/309 Rev-1
110	6.01.0002.3.01.4	2E34.201B	CSM/WST	Squeezing Cylinder (Big Male) of DUO, CSM.	RDSO/TM /012/07 Rev-1	TM/HM/6/310
111	6.01.0003.3.01.5	2E.34.202B	CSM/WST	Squeezing Cylinder (Small Male) of DUO, CSM	RDSO/TM /013/07 Rev-1	TM/HM/6/311
112	6.01.0004.3.01.6	2E34.41A	CSM/WST	Squeezing Cylinder (Big Female) of DUO, CSM	RDSO/TM/014/07 Rev-1	TM/HM/6/312
113	6.01.0005.3.01.7	CU12.501	UNI3S	Squeezing Cylinder (Male) Unimat.	RDSO/TM 015/07 Rev-1	TM/HM/6/313
114	6.01.0006.3.01.8	CU12.501	UNI3S	Squeezing Cylinder (Female) Unimat.	RDSO/TM/016/07 Rev-1	TM/HM/6/314
115	6.01.0007.3.01.9	2E35.303	UNI3S	Piston for Squeezing Cylinder	TM/0130	TM/HM/6/109
116	6.01.0008.3.01.1	W.37.1295	UNI3S	Piston for Squeezing Cylinder	TM/0417 Rev-1	TM/HM/6/383
117	6.01.0009.3.01.2	2E.36.443	UNI3S	Piston Squeezing Cylinder	TM/0414 Rev-1	TM/HM/6/383

118	6.01.0010.3.01.3	Specification and Drawing of spare parts has been revised and place at Sr No. 26				
119	6.01.0011.3.01.4	HZ10.063.036.0315.1	DTS	Piston Rod Complete of vibrator slide Cylinder Of DGS.	RDSO/TM/09/14	TM/HM/6/351
120	6.01.0012.3.01.5	W33.201	All UNI/MPT	Barrel for Tool Tilting Cylinder	RDSO/TM/01/12 Rev-1	TM/HM/6/319
121	6.01.0013.3.01.6	W33.202A	All UNI/MPT	Piston Rod For Tool Tilting Cylinder	TM/0551	TM/HM/6/242
122	6.01.0014.3.01.7	W33.205	All UNI/MPT	Piston For Tool Tilting Cyl Of Unimat	TM/0552 Rev-1	TM/HM/6/383
123	6.01.0015.3.01.8	JT30.06A	CSM	Piston Rod For Squeezing Cyl-Unimat	TM/0562	TM/HM/6/253
124	6.01.0016.3.01.9	Specification and Drawing of spare parts has been revised and place at Sr No. 99				
125	6.01.0017.3.01.1	W37.2052	Unimat -4S	Squeezing Cylinder body (Male) of Unimat-4S	RDSO/TM/08/23	TM/HM/6/538
126	6.01.0018.3.01.2	W37.2053	Unimat -4S	Squeezing Cylinder body (Female) of Unimat-4S	RDSO/TM/09/23	TM/HM/6/539
127	6.03.0001.3.01.5	CU.30.413	CSM/WST	Tamping Arm Small	TM/0127	TM/HM/6/106
128	6.03.0002.3.01.6	W37.1702	UNIMAT	Tamping arm left of unimat	RDSO/TM/03/20	TM/HM/6/443
129	6.03.0003.3.01.7	W37.1461	UNIMAT	Tamping arm right of unimat	RDSO/TM/04/20	TM/HM/6/444
130	6.03.0004.3.01.8	UD17.673A	CSM	Tamping arm modified big for CSM	RDSO/TM/07/20	TM/HM/6/461
131	6.03.0005.3.01.9	CU37.603	UNIMAT	Tool holder for tamping unit of Unimat	RDSO/TM/08/20	TM/HM/6/462
132	6.03.0006.3.01.1	UD15.1212	Unimat-4S	Swivel Bearing Right for Tamping Unit of Unimat-4S	RDSO/TM/09/20	TM/HM/6/463
133	6.03.0007.3.01.2	CA21.2404	T-EXP	Tamping Arm left of Tamping Express	RDSO/TM/22/20	TM/HM/6/483
134	6.03.0008.3.01.3	CA21.2405	T-EXP	Tamping Arm right of Tamping Express	RDSO/TM/23/20	TM/HM/6/484
135	6.03.0009.3.01.4	UD15.4202	CSM	Tamping arm modified small for CSM	RDSO/TM/03/21	TM/HM/6/488
136	6.03.0010.3.01.5	CA21.2401	Tamping Express	Tamping arm right of Tamping Express	RDSO/TM/07/21	TM/HM/6/492
137	6.03.0011.03.01.6	CA21.2402	Tamping Express	Tamping arm right of Tamping Express	RDSO/TM/08/21	TM/HM/6/493
138	6.03.0012.3.01.7	UD19.1202	Tamping Express	Tamping arm left of Tamping Express	RDSO/TM/09/21	TM/HM/6/494
139	6.03.0013.3.01.8	UD19.1203	Tamping Express	Tamping arm left of Tamping Express	RDSO/TM/10/21	TM/HM/6/495
140	6.03.0014.3.01.9	W37.1703	Unimat	Tamping Arm of Unimat	RDSO/TM/15/21	TM/HM/6/500
141	6.03.0015.3.01.1	W37.1301	UNI-3S	Swivel bearing for tamping unit of UNI-3S	RDSO/TM/18/21	TM/HM/6/502
142	6.03.0016.3.01.2	W37.1302	UNI-3S	Swivel bearing right for tamping unit of UNI-3S	RDSO/TM/19/21	TM/HM/6/503
143	6.03.0017.3.01.3	CU37.604	Unimat	Tool holder right for tamping unit of Unimat	RDSO/TM/20/21	TM/HM/6/504
144	6.03.0018.3.01.9	CU37.503	Unimat -2S/	Tool Holder for tamping unit of UNIMAT-2S/3S	RDSO/TM/03/23	TM/HM/6/534
145	6.03.0019.3.01.1	CU37.504	Unimat -2S/	Tool Holder for tamping unit of UNIMAT-2S/3S	RDSO/TM/04/23	TM/HM/6/535
146	6.03.0020.3.01.2	W37.1462	Unimat -4S	Tamping Arm for Unimat-4S	RDSO/TM/05/23	TM/HM/6/536
147	6.04.0001.3.01.6	DL23.401	CSM/WST	Eccentric Vibration Shaft with Disc and Nut	TM/0321 Rev-1	TM/HM/6/127

148	6.04.0002.3.01.7	UD25-1101	09-3X	Eccentric Vibration Shaft of 3X Machine	RDSO/TM/02/12	TM/HM/6/327
149	6.04.0003.3.01.8	UD25-1102	09-3X	Eccentric Vibration Shaft of 3X Machine	RDSO/TM/03/12	TM/HM/6/328
150	6.04.0004.3.01.9	2E.22.36	09-3X	Castle nut for vibration shaft	TM/0509	TM/HM/6/196
151	6.04.0005.3.01.9	CU20.301	UNIMAT	Vibration shaft for vibration drive of Unimat	RDSO/TM/18/20	TM/HM/6/481
152	6.04.0006.3.01.1	CU20.103	Unimat -4S	Connecting Piece for Vibration drive of Unimat-4S	RDSO/TM/10/23	TM/HM/6/540
153	6.04.0007.3.01.2	UD-63-1004	UNI	Shaft for UNIMAT drive	RDSO/TM/15/23	TM/HM/6/544
154	6.04.0008.3.01.3	DL 23 102 2	UNI	Eccentric vibration shaft of Unimat	RDSO/TM/01/24	TM/HM/6/551
155	6.04.0009.3.01.4	UD 25-501	DUO	Eccentric vibration shaft of Duomatic	RDSO/TM/08/24	TM/HM/6/558
156	6.05.0001.3.01.7	2E31.02A	All TU	Steel Bush for Tamping Arm Centre pin	TM/0129 Rev-1	TM/HM/6/108 Rev-1
157	6.05.0002.3.01.8	DL10.53	Common Tamper	Support Plate and Bolt	TM/0409	TM/HM/6/141
158	6.05.0003.3.01.9	UD67.752	CSM	Guide Rod for CSM	TM/0424	TM/HM/6/160
159	6.05.0004.3.01.1	E.6203	CSM	Guide rod for tamping unit	TM/0505	TM/HM/6/192
160	6.05.0005.3.01.2	G20.13	All TU	Connecting rod for tamping unit	TM/0510	TM/HM/6/197
161	6.05.0006.3.01.3	UD313.1035	Common Tamper	Guide Rod For Lifting Hook Sliding Unit - UNI	TM/0561	TM/HM/6/252
162	6.05.0007.3.01.4	UD19.221	09-3X	Connecting rod bolt of Tamping Express	RDSO/TM/06/16 Rev-1	TM/HM/6/366
163	6.05.0008.3.01.5	G20.26B	All TU	Sleeve for tamping unit	TM/0508 Rev-2	TM/HM/6/195
164	6.05.0009.3.01.6	DL150.02	Common Tamper	Sleeve for roll clamp	TM/0511	TM/HM/6/198
165	6.05.0010.3.01.7	W37.1410	UNI	Axle Bolt	TM/0554 Rev-1	TM/HM/6/245
166	6.05.0011.3.01.8	W37.1293	UNI	Gland Bush For Squeezing Cyl.	TM/0556 Rev-1	TM/HM/6/383
167	6.05.0012.3.01.9	CU37.308	UNI	Bearing Bush	TM/0557	TM/HM/6/248
168	6.05.0013.3.01.1	2W31.205	UNI	Bearing Bush	TM/0558	TM/HM/6/249
169	6.05.0014.3.01.2	W33.159	UNI	Bush	TM/0563	TM/HM/6/254
170	6.05.0015.3.01.3	UD19.285	09-3X	Bearing Bush	TM/0580 Rev-1	TM/HM/6/383
171	6.05.0016.3.01.4	WN153.82f7.1365-1	09-3X	Guide column for Tamping Express	RDSO/TM/03/16 Rev-1	TM/HM/6/363
172	6.05.0017.3.01.5	CU.37.632	UNI	Tamping Unit Pin	TM/0553	TM/HM/6/244
173	6.05.0018.3.01.6	2E.33.62	All TU	Pin for clapper Bracket	TM/0501	TM/HM/6/188
174	6.05.0019.3.01.7	E36.65A	All TU	Pin for clapper cylinder Dia.12x92	TM/0515	TM/HM/6/201
175	6.05.0020.3.01.8	E36.63A	All TU	Pin for clapper cylinder	TM/0516	TM/HM/6/202
176	6.05.0021.3.01.9	2E.33.65a	All TU	Pin for clapper Bracket	TM/0532	TM/HM/6/223
177	6.05.0022.3.01.1	2E.33.63a	All TU	Pin for clapper Bracket	TM/0533	TM/HM/6/224
178	6.05.0024.3.01.3	2E.34.210	All TU	Bush for Tamping Arm	TM/0411 Rev-2	TM/HM/6/383
179	6.05.0025.3.01.4	Item is repeated at Sr No .191				
180	6.05.0026.3.01.5	2E.34.231	UNI	Piston Rod Bush	TM/0413 Rev-1	TM/HM/6/383
181	6.05.0027.3.01.6	2E36.46C	UNI	Gland Bush for Squeezing Cylinder	TM/0415 Rev-1	TM/HM/6/383
182	6.05.0028.3.01.7	DL12.06	All TU	Guide Rod Bush	TM/0416 Rev-2	TM/HM/6/383
183	6.05.0029.3.01.8	W.33.220	UNI	Gland Bush for Arm Tilting Cylinder	TM/0418 Rev-1	TM/HM/6/383
184	6.05.0030.3.01.9	W.61.02.25	Common Tamper	Sliding Guide Rod Bush	TM/0419 Rev-1	TM/HM/6/383
185	6.05.0031.3.01.1	2E.22.09	All TU	Bush for NJ219 bearing	TM/0502 Rev-2	TM/HM/6/189
186	6.05.0032.3.01.2	UD22.350	CSM/WST	Vibration Shaft Key	TM/0571	TM/HM/6/262
187	6.05.0033.3.01.3	UD22.307	09-3X	Vibration Shaft Key	TM/0572	TM/HM/6/263
188	6.05.0034.3.01.4	UD15.1231	UNI 4S	Pin, Nut and Washer of Tamping Unit	RDSO/TM/01/17	TM/HM/6/378
189	6.05.0035.3.01.5	E60.08 ASS	Common Tamper	Hex Bolt Special (Guide Column Bolt)	TM/013/06	TM/HM/6/299
190	6.05.0036.3.01.6	W37.1440	UNI	Thrust Washer	TM/0559 Rev-1	TM/HM/6/383
191	6.05.0037.3.01.7	M30X2X340DIN 960-8.8	09-3X	Hex screw for tamping unit of Tamping Express.	RDSO/TM/28/17	TM/HM/6/407
192	6.05.0038.3.01.8	2E32.05	Common Tamper	Cap washer of CSM/DUO/WST	RDSO/TM/16/17	TM/HM/6/398

193	6.05.0039.3.01.9	2E36.48	All TU	Bolt for Tamping Arm Center Bore & Nut	TM/0425 Rev-2	TM/HM/6/161
194	6.05.0040.3.01.1	W37.2382	UNI 4S	Bolt for tamping unit of Unimat 08-457 4S	RDSO/TM/06/15	TM/HM/6/361
195	6.05.0041.3.01.2	G30.42	UNI	Set Screw	TM/0560	TM/HM/6/251
196	6.05.0042.3.01.3	2E31.04	All TU	Piston Screw	TM/0426	TM/HM/6/162
197	6.05.0043.3.01.4	UD19.1230	Tamping Express	Counter weight for squeezing cylinder small female for Tamping Express	RDSO/TM/02/18	TM/HM/6/414
198	6.05.0044.3.01.5	UD15.1211	UNIMAT	Swivel bearing for tamping unit of Unimat-4S	RDSO/TM/05/21	TM/HM/6/490
199	6.05.0045.3.01.6	UD19.287	Tamping Express	Bearing bush for tamping cylinder of Tamping Express	RDSO/TM/17/21	TM/HM/6/383
200	6.05.0046.3.01.7	UD25.1130	Tamping Express	Sleeve for vibration shaft of Tamping Express	RDSO/TM/21/21	TM/HM/6/505
201	6.05.0047.3.01.8	UD25.1131	Tamping Express	Sleeve for vibration shaft of Tamping Express	RDSO/TM/22/21	TM/HM/6/506
202	6.05.0048.3.01.9	UD25.1132	Tamping Express	Sliding Sleeve for vibration shaft of Tamping Express	RDSO/TM/23/21	TM/HM/6/507
203	6.05.0049.3.01.1	2E33.25	DUO/CSM	Bearing Bush	TM/0412 Rev-2	TM/HM/6/383
204	6.05.0050.3.01.2	G20.14	UNIMAT	Modified steel bush for squeezing cylinder of Unimat	RDSO/TM/01/22	TM/HM/6/512
205	6.05.0051.3.01.3	Item is repeated at Sr No .166				
206	6.05.0052.3.01.4	Item is repeated at Sr No.170				
207	6.05.0053.03.01.5	WN153.82f.1340.01	Tamping Unit	Guide Rod for Tamping Unit	RDSO/TM/06/23	TM/HM/6/537
208	6.05.0054.3.01.6	E120.13B	Unimat -2S/3S	Coupling Cover for tamping unit of Unimat -2S/3S	RDSO/TM/11/23	TM/HM/6/541
209	6.05.0055.3.01.7	C-1005	CSM/DUO	Cover for fly wheel of CSM/DUO	RDSO/TM/12/23	TM/HM/6/542
210	6.05.0056.3.01.8	CU20.302	Unimat -4S	Fly wheel for tamping unit of Unimat -4S	RDSO/TM/13/23	TM/HM/6/543
211	6.05.0057.3.01.9	CU 20-732	09-3x	Sliding sleeve for vibration shaft of Tamping Express	RDSO/TM/02/24	TM/HM/6/552
212	6.05.0058.3.01.1	TAMPING ARM BOLT CU21.3110-8, DISC 2E-32-05, HEX NUT 42X1.5 DIN 934-8 & SPRING WASHER B42DIN 127/VERZ	MPT/MFI	Tamping Arm Bolt with Disc, Hex Nut & Spring Washer for UNIMAT (MPT/MFI)	RDSO/TM/23/24	TM/HM/6/FRS/003
213	6.06.0001.3.01.8	MB6560DX	CSM/WST	P.B Bush of lining roller assembly for CSM	RDSO/TM/13/16	TM/HM/6/383
214	6.06.0002.3.01.9	E150.35a & E150.35b	CSM	Semi finished Bush of Lifting Unit of CSM	RDSO/TM/07/19	TM/HM/6/383
215	6.06.0003.3.01.1	1023.46.00.018	VPR	Bushing of Tamping Unit for VPR	RDSO/TM/08/19	TM/HM/6/383
216	6.07.0001.3.01.9	2E22.10A	UNI	Fly Wheel Outer	TM/0405 Rev-1	TM/HM/6/137 Rev-1
217	6.07.0002.3.01.1	U21.01	CSM/WST	Fly Wheel Inner	TM/0406	TM/HM/6/138
218	6.07.0003.3.01.2	UD22.325	CSM/WST	Fly wheel(inner) for Tamping Express	RDSO/TM/04/16	TM/HM/6/364
219	6.07.0004.3.01.3	E23.70a	UNI	Fly Wheel Of Unimat	TM/0547 Rev-1	TM/HM/6/238 Rev-1
220	6.07.0005.3.01.4	E23.60a	UNI	Fly Wheel Of Unimat	TM/0548 Rev-1	TM/HM/6/239 Rev-1
221	6.07.0006.3.01.5	U21.01	CSM	Fly Wheel with Auxiliary Plate	TM/003/06	TM/HM/6/289
222	6.07.0007.3.01.6	UD25.909	09-3X	Flange	TM/0567	TM/HM/6/258
223	6.07.0008.3.01.7	DL.12.51	All TU	Cover	TM/0504	TM/HM/6/191
224	6.07.0009.3.01.8	CU20.434	09-3X	Cover	TM/0564	TM/HM/6/255
225	6.07.0010.3.01.9	2E34.50	09-3X	Cover Plate	TM/0403	TM/HM/6/135
226	6.07.0011.3.01.1	DL.10.56	All T/U	Cover for Pivot Bearing	TM/0443	TM/HM/6/179
227	6.07.0012.3.01.2	DL.12.05	All T/U	Cover plate for tamping unit guide rod bush	TM/0503	TM/HM/6/190

228	6.07.0013.3.01.3	2E35.314	CSM/WST	Cover Plate for Small Squeezing Cylinder	TM/0404	TM/HM/6/136
229	6.07.0014.3.01.4	W.33.143	UNI	Cover Plate for Tool Tilting Cylinder	TM/0422	TM/HM/6/156
230	6.07.0015.3.01.5	2E.31.19ART	All T/U	Cover Plate for Tamping Tool	TM/0437	TM/HM/6/173
231	6.07.0016.3.01.6	W37.1294	UNI	Cover plate for squeezing cylinder of Unimat	TM/0549	TM/HM/6/240
232	6.07.0017.3.01.7	UD25.1133	09-3X	Cover plate for vibration shaft of T-Exp	RDSO/TM/02/16	TM/HM/6/362
233	6.07.0018.3.01.8	TDL.20.01	All T/U	Top Plate for Guide Rod	TM/0438	TM/HM/6/174
234	6.07.0019.3.01.9	2E22.15	All T/U	Bearing Cover	TM/0128	TM/HM/6/107
235	6.07.0020.3.01.1	2E22.16	All T/U	Bearing Cover	TM/0407	TM/HM/6/139
236	6.07.0021.3.01.2	2E34.211	All T/U	Pressure Disc Cover	TM/0131 Rev-1	TM/HM/6/110
237	6.07.0022.3.01.3	E.61.04	All T/U	Bottom bearing plate for guide rod	TM/0507	TM/HM/6/194
238	6.07.0023.3.01.4	2E22.11	All T/U	Body Bearing	TM/0408	TM/HM/6/140
239	6.07.0024.3.01.5	DI.23.103	CSM/WST/UNI	Box bearing	TM/0513	TM/HM/6/199
240	6.07.0025.3.01.6	DL10.52	Common Tamper	Support Ring (Tamping unit lifting cylinder suspension bracket)	TM/0410	TM/HM/6/143
241	6.07.0026.3.01.7	W.37.14407	CSM/UNI/WST T/U	Spacer Ring	TM/0421 Rev-1	TM/HM/6/383
242	6.07.0027.3.01.8	2E223.01A	CSM/UNI/WST T/U	Spacer ring for vibration shaft	TM/0517 Rev-2	TM/HM/6/203 Rev-2
243	6.07.0028.3.01.9	DL.23.107	CSM/UNI/WST T/U	Spacer ring for vibration shaft	TM/0518 Rev-2	TM/HM/6/204
244	6.07.0029.3.01.1	2E22.04A	CSM/UNI/WST T/U	Spacer ring for vibration shaft	TM/0519 Rev-2	TM/HM/6/205 Rev-2
245	6.07.0030.3.01.2	DL23.108	CSM/UNI/WST T/U	Spacer ring for vibration shaft	TM/0520 Rev-2	TM/HM/6/206 Rev-2
246	6.07.0031.3.01.3	2E22.06	CSM/UNI/WST T/U	Spacer ring for vibration shaft	TM/0521 Rev-2	TM/HM/6/207 Rev-2
247	6.07.0032.3.01.4	2E.22.07	CSM/UNI/WST T/U	Spacer ring for vibration shaft	TM/0522 Rev-2	TM/HM/6/208
248	6.07.0033.3.01.5	Item deleted				
249	6.07.0034.3.01.6	2E.22.12	CSM/UNI/WST T/U	Spacer ring for vibration shaft	TM/0523 Rev-1	TM/HM/6/209 Rev-1
250	6.07.0035.3.01.7	2E.22.26	CSM/UNI/WST T/U	Spacer ring for vibration shaft	TM/0525 Rev-2	TM/HM/6/211
251	6.07.0036.3.01.8	UD25.306	CSM/UNI/WST T/U	Spacer Ring	TM/0565	TM/HM/6/256
252	6.07.0037.3.01.9	U21.720	09-3X	Support ring	TM/0566	TM/HM/6/257
253	6.07.0038.3.01.1	WN121.65.1.85.16.1	09-3X	Spacer Ring	TM/0568	TM/HM/6/259
254	6.07.0039.3.01.2	WN121.65.1.85.24.6.1	09-3X	Spacer Ring	TM/0569	TM/HM/6/260
255	6.07.0040.3.01.3	UD19.222	09-3X	Spacer Bush Ring	TM/0570 Rev-1	TM/HM/6/261 Rev-1
256	6.07.0041.3.01.4	UD 25.908	09-3X	Spacer Ring	TM/0573	TM/HM/6/264
257	6.07.0042.3.01.5	UD 25.307	09-3X	Spacer Ring	TM/0574	TM/HM/6/265
258	6.07.0043.3.01.6	2E.36.457	09-3X	Piston	TM/0581 Rev-1	TM/HM/6/383
259	6.07.0044.3.01.7	2E.34.55	09-3X	Spacer Ring	TM/0582	TM/HM/6/275
260	6.07.0045.3.01.8	W37.2040	UNI 4S	Spacer ring for tamping unit of Unimat 08-457 4S	RDSO/TM/02/15	TM/HM/6/357
261	6.07.0046.3.01.9	W37.2356	UNI 4S	Spacer ring for tamping unit of Unimat 08-457 4S	RDSO/TM/03/15	TM/HM/6/358
262	6.07.0047.3.01.1	W37.2055	UNI 4S	Spacer ring for tamping unit of Unimat 08-457 4S	RDSO/TM/04/15	TM/HM/6/359
263	6.07.0048.3.01.2	W33.159	UNI 4S	Spacer ring for tamping unit of Unimat 08-457 4S	RDSO/TM/05/15	TM/HM/6/360
264	6.07.0050.3.01.4	2E.36.47a	09-3X	Piston screw for squeezing cylinder piston rod small	TM/0534	TM/HM/6/225
265	6.07.0051.3.01.5	E.36.42C	Common Tamper	Piston Rod with Piston Screw	TM/0423	TM/HM/6/159

266	6.07.0052.3.01.6	U.21.02	CSM/WST	Part Clutch	TM/0451	TM/HM/6/187
267	6.07.0053.3.01.7	NA	UNI	Distributor Block of tamping unit of UNI	TM/0587	TM/HM/6/277
268	6.07.0054.3.01.8	2E.134.42a	UNI	Piston rod	TM/0538	TM/HM/6/229
269	6.07.0055.3.01.9	E20.13c	UNI	Toothed Coupling for Unimat	TM/0545	TM/HM/6/236
270	6.07.0056.3.01.1	NA	WST	Locking Device for Tamping Unit of- DUO	TM/0401	TM/HM/6/133
271	6.07.0057.3.01.2	NA	CSM/WST	Locking Device for Tamping Unit of CSM	TM/0402	TM/HM/6/134
272	6.07.0058.3.01.3	UD19.936	09-3X	Mounting plate for guide rod of Tamping Express.	RDSO/TM/27/17	TM/HM/6/406
273	6.07.0059.3.01.4	UD25.742	09-3X	Bearing arm with plate guard of Tamping Express	RDSO/TM/05/16	TM/HM/6/365
274	6.07.0060.3.01.5	E19.916	09-3X	Plate guard motor-side for Tamping Express	RDSO/TM/07/16	TM/HM/6/372
275	6.07.0061.3.01.6	CU20.1141	09-3X	Cover plate of vibration shaft for T-Exp	RDSO/TM/08/16	TM/HM/6/373
276	6.07.0062.3.01.7	E62.01-15/16G & E62.01-30/31AG	T-Exp, CSM & Duo	Holding Bracket for Lifting Unit of T-Exp, CSM & Duomatic	RDSO/TM/06/19	TM/HM/6/429
277	6.07.0063.3.01.8	UD19.901ALI	Tamping Express	Cover plate for mounting bracket of Tamping Express	RDSO/TM/06/21	TM/HM/6/491
278	6.07.0064.3.01.9	2E45.60LE	Tamping Express	Distributor left for tamping unit of T-Exp.	RDSO/TM/11/21	TM/HM/6/496
279	6.07.0065.3.01.1	2E45.60RE	Tamping Express	Distributor right for tamping unit of Tamping Express.	RDSO/TM/12/21	TM/HM/6/497
280	6.07.0066.3.01.2	UD10.2980	CSM & Duomatic	Outer cover guard of CSM & Duomatic	RDSO/TM/14/21	TM/HM/6/499
281	6.07.0067.3.01.3	UD25.908A	Tamping Express	Spacer ring for vibration shaft of Tamping Express	RDSO/TM/24/21	TM/HM/6/508
282	6.07.0068.3.01.4	E34.143AS	T-Exp	Damping Discs for wheel support of T-Exp	RDSO/TM/05/22	TM/HM/6/515
283	6.07.0069.3.01.5	DL90.53A	Unimat-2S/3S	Distributor block of Unimat-2S/3S	RDSO/TM/09/22	TM/HM/6/519
284	6.07.0070.3.01.6	DL90.53	Unimat-4S	Hydraulic distributor block of Unimat-4S	RDSO/TM/10/22	TM/HM/6/520
285	6.07.0071.3.01.7	UD19.624	tamping express	Mounting plate for guide column of tamping express	RDSO/TM/12/22	TM/HM/6/522
286	6.07.0072.3.01.8	UD25.619	Tamping express	Clutch flange for vibration shaft of tamping express	RDSO/TM/13/22	TM/HM/6/523
287	6.07.0073.3.01.9	UD66.3273-I	CSM,DUO, 09-3X & Unimat	Round unit for tamping cyl of CSM,DUO,09-3X & Unimat	RDSO/TM/14/22	TM/HM/6/524
288	6.07.0074.3.01.1	DL23.104	DUO,CSM and UNI-2S/3S	Bearing flange for vibration drive of DUO,CSM and UNI-2S/3S	RDSO/TM/15/22	TM/HM/6/525
289	6.07.0075.3.01.2	Repeated item				
290	6.07.0076.3.01.3	2E.22.05A	CSM/UNI/ WST T/U	Spacer ring for vibration shaft	TM/0524 Rev-2	TM/HM/6/210 Rev-2
291	6.08.0001.3.01.1	NA	CSM	Tamping Tool for CSM	TM/9303	TM/HM/6/26
292	6.08.0002.3.01.2	NA	UNI	Tamping Tool for P & C Tamper (Unimat)	TM/9327/1	TM/HM/6/26
293	6.08.0003.3.01.3	NA	All T/U	Tungsten Carbide Tip Tamping Tool (TCTT) for On-Track Tamping Machines.	RDSO/TM/15A/16	TM/HM/6/320 Rev-2 (2016)
294	6.08.0004.3.01.4	NA	All T/U	Tungsten Carbide Tip Tamping Tool (TCTT) for On-Track Tamping Machines.	RDSO/TM 15B/16	TM/HM/6/320 Rev-2 (2016)
295	6.08.0005.3.01.5	NA	All T/U	Tungsten Carbide Tip Tamping Tool (TCTT) for On-Track Tamping Machines.	RDSO/TM 15C/16	TM/HM/6/320 Rev-2 (2016)
296	6.08.0006.3.01.6	NA	All T/U	Tungsten Carbide Tip Tamping Tool (TCTT) for On-Track Tamping Machines.	RDSO/TM 15D/16	TM/HM/6/320 Rev-2 (2016)

297	6.08.0007.3.01.7	NA	All T/U	Tungsten Carbide Tip Tamping Tool (TCTT) for On-Track Tamping Machines.	RDSO/TM 15E/16	TM/HM/6/320 Rev-2 (2016)
298	6.08.0008.3.01.8	NA	All T/U	Tungsten Carbide Tip Tamping Tool (TCTT) for On-Track Tamping Machines.	RDSO/TM/14A/16	TM/HM/6/320 Rev-2 (2016)
299	6.08.0009.3.01.9	NA	All T/U	Tungsten Carbide Tip Tamping Tool (TCTT) for On-Track Tamping Machines.	RDSO/TM 14B/16	TM/HM/6/320 Rev-2 (2016)
300	6.08.0010.3.01.1	NA	All T/U	Tungsten Carbide Tip Tamping Tool (TCTT) for On-Track Tamping Machines.	RDSO/TM 14C/16	TM/HM/6/320 Rev-2 (2016)
301	6.08.0011.3.01.2	NA	All T/U	Tungsten Carbide Tip Tamping Tool (TCTT) for On-Track Tamping Machines.	RDSO/TM 14D/16	TM/HM/6/320 Rev-2 (2016)
302	6.08.0012.3.01.3	NA	All T/U	Tungsten Carbide Tip Tamping Tool (TCTT) for On-Track Tamping Machines.	RDSO/TM 01A/16	TM/HM/6/320 Rev-2 (2016)
303	6.08.0013.3.01.4	NA	All T/U	Tungsten Carbide Tip Tamping Tool (TCTT) for On-Track Tamping Machines.	RDSO/TM 01B/16	TM/HM/6/320 Rev-2 (2016)
304	6.08.0014.3.01.5	NA	All T/U	Tungsten Carbide Tip Tamping Tool (TCTT) for On-Track Tamping Machines.	RDSO/TM 01C/16	TM/HM/6/320 Rev-2 (2016)
305	6.08.0015.3.01.6	NA	CSM/WST	Tamping Tool Square Armed for CSM	TM/9702	TM/HM/6/26
306	6.10.0001.3.01.3	WN153.90.f6.945.1	UNI	Hook Sliding Guide Rod -3S	RDSO/TM/075/05	TM/HM/6/266
307	6.10.0002.3.01.4	WN109.20.e85.55.2	UNI	Pin for Unit Sliding Cylinder -3S	RDSO/TM/077/05	TM/HM/6/268
308	6.11.0001.3.01.4	E150.100	CSM/WST	Lifting unit guide rod	TM/0526	TM/HM/6/212
309	6.11.0002.3.01.5	E150.27	All Tampers	Pin for track lifting unit	TM/0527	TM/HM/6/213
310	6.11.0003.3.01.6	WN109.60f.8.147	UNI	Pin for Roller UNI-3S	RDSO/TM/078/05	TM/HM/6/269
311	6.11.0004.3.01.7	UD150.1306	CSM/WST	Roller of lining roller assembly for CSM	RDSO/TM/09/16	TM/HM/6/374
312	6.11.0005.3.01.8	UD150.1556	09-3X	Eccentric Bush of lining roller assembly for CSM-3X	RDSO/TM/11/16	TM/HM/6/376
313	6.11.0006.3.01.9	UD150.1557	09-3X	Key of lining roller assembly for CSM-3X	RDSO/TM/12/16	TM/HM/6/377
314	6.11.0007.3.01.1	CU311.3020	UNI	Semi finished bush for lifting hook of Unimat	RDSO/TM/14/17	TM/HM/6/383
315	6.11.0008.3.01.2	CU311.3019	UNI	Semi finished bush for lifting hook guide rod of Unimat	RDSO/TM/15/17	TM/HM/6/383
316	6.11.0009.3.01.3	UD311.1205	UNI	Knuckle joint with bolt of Unimat	RDSO/TM/19/17	TM/HM/6/404
317	6.11.0010.3.01.4	E150.01	All Tampers	Roller Disk Clamp and Pressure Bush for Lifting/Lining on Tamping Machine	TM/9322 Rev-2	TM/HM/6/21 Rev-2
318	6.11.0011.3.01.5	HZ09GB.050.0580.001	UNI	Tube / Sleeve for Hook Sliding Cylinder of Unimat	RDSO/TM/003/07	TM/HM/6/301
319	6.11.0012.3.01.6	HZ10.050.025.0580.1	UNI	Piston Rod for Hook Sliding Cylinder of Unimat	RDSO/TM/04/07	TM/HM/6/302
320	6.11.0013.3.01.7	HZ10.050.025.0580.1	UNI	Piston for Hook Sliding Cylinder of Unimat	RDSO/TM 05/07 Rev-1	TM/HM/6/383
321	6.11.0014.3.01.8	WN141.35H7.73.40.1	UNI	Pin with washer for Hook Sliding Cylinder of Unimat	RDSO/TM/006/07	TM/HM/6/304
322	6.11.0015.3.01.9	UD313.1963	UNI	Support / Yoke for Hook Sliding Cylinder of Unimat	RDSO/M/007/07	TM/HM/6/305

323	6.11.0016.3.01.1	HZ06.050.025	UNI	Gland for Hook Sliding Cylinder of Unimat	RDSO/TM/008/07	TM/HM/6/306
324	6.11.0017.3.01.2	E150.180	CSM/WST	Hydraulic Rail Clamp Cylinder	RDSO/TM/009/07, RDSO/TM/010/07, RDSO/TM /01/08, RDSO/TM /02/08, RDSO/TM /03/08	TM/HM/6/307, TM/HM/6/308, TM/HM/6/315, TM/HM/383, TM/HM/6/317
325	6.11.0018.3.01.3	E150.182	CSM	Piston Rod for Hydraulic Rail Clamp Cylinder of CSM	RDSO/TM/009/07	TM/HM/6/307
326	6.11.0019.3.01.4	E150.183	CSM	Piston for Hydraulic Rail Clamp Cyl of CSM	RDSO/TM/010/07	TM/HM/6/308
327	6.11.0020.3.01.5	E.150-185	CSM	Cover Plate of Hy. Rail clamp cyl.of CSM	RDSO/TM /01/08	TM/HM/6/315
328	6.11.0021.3.01.6	E.150-184	CSM	Gland of Hy. Rail clamp Cyl.of CSM	RDSO/TM /02/08	TM/HM/383
329	6.11.0022.3.01.7	E.150-181	CSM	Sleeve of Hy. Rail clamp Cyl of CSM	RDSO/TM /03/08	TM/HM/6/317
330	6.11.0023.3.01.8	HZ09.MB.063.0180	DTS	Cylinder Tube of roller clamp lifting Cylinder of DGS	RDSO/TM/02/14	TM/HM/6/344
331	6.11.0024.3.01.9	HZ10.063.036.0180.1	DTS	Piston Rod Complete of roller clamp lifting Cylinder of DGS	RDSO/TM/03/14	TM/HM/6/345
332	6.11.0025.3.01.1	HZ06.063.036	DTS	Guide Bush of roller clamp lifting Cylinder of DGS	RDSO/TM/04/14	TM/HM/6/346
333	6.11.0026.3.01.2	HZ09.GB.063.036.007 5.001	DTS	Cylinder Tube of vibrator slide Cylinder Of DGS.	RDSO/TM/08/14	TM/HM/6/350
334	6.11.0027.3.01.3	WN107.20h7.71.5.1	UNI	Pin for rail clamp cylinder of Unimat	RDSO/TM/07/17	TM/HM/6/389
335	6.11.0028.3.01.4	WN107.20h7.84.6.3.2	UNI	Pin for rail clamp cylinder of Unimat	RDSO/TM/08/17	TM/HM/6/390
336	6.11.0029.3.01.5	DL.150.11.a	UNI	Hex Nut for Clamp Roller	TM/0537	TM/HM/6/228
337	6.11.0030.3.01.6	DL150.06	T-Exp	Pressure nut for roller clamps of T-Exp	RDSO/TM/21/22	TM/HM/6/530
338	6.11.0031.3.01.7	E 150.15	CSM	Pin for roller clamp of CSM	RDSO/TM/16/24	TM/HM/6/566
339	6.11.0032.3.01.8	E 150.24	CSM	Pin for lifting unit of CSM	RDSO/TM/18/24	TM/HM/6/568
340	6.11.0033.3.01.9	E150.06	DUO, CSM & T-Exp	Chuck nut for disc clamp	RDSO/TM/15/24	TM/HM/6/565
341	6.11.0034.3.01.1	UD313.1304	UNI	Lifting Hook with castle nut for Unimat	RDSO/TM/21/24	TM/HM/6/FRS/001
342	7.07.0001.3.01.1	UD61.833	CSM	Bush for pivot of CSM	RDSO/TM/28/21	TM/HM/6/383
343	8.06.0001.3.01.1	E150-06	Duo, CSM & T. Exp	Chuck Nut for disc clamp of Duo, CSM & T. Exp	RDSO/TM/15/24	TM/HM/6/565
344	8.07.0001.3.01.2	2W20.3	UNI	Part clutch	TM/0514	TM/HM/6/200
345	8.07.0002.3.01.3	UD890.4452	Tamping Exp (Roller with pin, spacer bush, nilos ring & castle nut for Tamping Exp.)	Roller	RDSO/TM/01/20	TM/HM/6/441
		WN109-45g6.298.M30X2.2		Pin		
		WN121-45H11.54.128.1		Spacer Bush		
		6209AV		Nilos Ring		
		M28XDIN980-8		Castle Nut		
346	8.07.0003.3.01.4	UD80.4200C	T-Exp	Satellite roller for T-Exp	RDSO/TM/19/22	TM/HM/6/528
347	8.07.0004.3.01.5	UD 61.852	UNIMAT, CSM & T.EXP	Pin for Cabin Support Cylinder of UNIMAT, CSM & T.EXP	RDSO/TM/12/24	TM/HM/6/562
348	8.08.0001.3.01.3	62.08.1215	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9315/1 Rev -1	TM/HM/6/15Rev-2 (2015)
349	8.08.0002.3.01.4	64.08.1636	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9315/1 Rev -1	TM/HM/6/15Rev-2 (2015)
350	8.08.0003.3.01.5	64.08.1369	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9315/1 Rev -1	TM/HM/6/15Rev-2 (2015)
351	8.08.0004.3.01.6	64.08.1449	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9315/1 Rev -1	TM/HM/6/15Rev-2 (2015)

352	8.08.0005.3.01.7	64.08.1623	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9315/2 Rev -1	TM/HM/6/15Rev-2 (2015)
353	8.08.0006.3.01.8	62.08.1217	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9315/2 Rev -1	TM/HM/6/15Rev-2 (2015)
354	8.08.0007.3.01.9	64.08.1461	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9315/2 Rev -1	TM/HM/6/15Rev-2 (2015)
355	8.08.0008.3.01.1	62.08.1300	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9315/2 Rev -1	TM/HM/6/15Rev-2 (2015)
356	8.08.0009.3.01.2	64.08.1209	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9315/3 Rev -1	TM/HM/6/15Rev-2 (2015)
357	8.08.0010.3.01.3	64.08.1451	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9315/3 Rev -1	TM/HM/6/15Rev-2 (2015)
358	8.08.0011.3.01.4	62.08.1299	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9315/3 Rev -1	TM/HM/6/15Rev-2 (2015)
359	8.08.0012.3.01.5	62.08.1301	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9315/3 Rev -1	TM/HM/6/15Rev-2 (2015)
360	8.08.0013.3.01.6	64.08.1637	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9315/4 Rev -1	TM/HM/6/15Rev-2 (2015)
361	8.08.0014.3.01.7	62.08.1214	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9315/4 Rev -1	TM/HM/6/15Rev-2 (2015)
362	8.08.0015.3.01.8	62.08.1624	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9315/4 Rev -1	TM/HM/6/15Rev-2 (2015)
363	8.08.0016.3.01.9	62.08.1213	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9315/4 Rev -1	TM/HM/6/15Rev-2 (2015)
364	8.08.0017.3.01.1	64.08.1469	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9415/5 Rev -1	TM/HM/6/15Rev-2 (2015)
365	8.08.0018.3.01.2	64.08.1617	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9415/5 Rev -1	TM/HM/6/15Rev-2 (2015)
366	8.08.0019.3.01.3	62.08.1211	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9415/5 Rev -1	TM/HM/6/15Rev-2 (2015)
367	8.08.0020.3.01.4	64.08.1619	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9415/5 Rev -1	TM/HM/6/15Rev-2 (2015)
368	8.08.0021.3.01.5	64.08.1450	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9415/6 Rev -1	TM/HM/6/15Rev-2 (2015)
369	8.08.0022.3.01.6	64.08.1620	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9415/6 Rev -1	TM/HM/6/15Rev-2 (2015)
370	8.08.0023.3.01.7	64.08.1329	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9415/6 Rev -1	TM/HM/6/15Rev-2 (2015)
371	8.08.0024.3.01.8	64.08.1642	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9415/6 Rev -1	TM/HM/6/15Rev-2 (2015)
372	8.08.0025.3.01.9	62.08.1230	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9415/7 Rev -1	TM/HM/6/15Rev-2 (2015)
373	8.08.0026.3.01.1	64.08.1635	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9415/7 Rev -1	TM/HM/6/15Rev-2 (2015)
374	8.08.0027.3.01.2	64.08.1226	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9415/7 Rev -1	TM/HM/6/15Rev-2 (2015)
375	8.08.0028.3.01.3	64.08.1618	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9415/7 Rev -1	TM/HM/6/15Rev-2 (2015)
376	8.08.0029.3.01.4	64.08.1455	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9415/8 Rev -1	TM/HM/6/15Rev-2 (2015)
377	8.08.0030.3.01.5	64.08.1212	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9415/8 Rev -1	TM/HM/6/15Rev-2 (2015)
378	8.08.0031.3.01.6	62.08.1222	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9415/8 Rev -1	TM/HM/6/15Rev-2 (2015)
379	8.08.0032.3.01.7	64.08.1333	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9415/8 Rev -1	TM/HM/6/15Rev-2 (2015)
380	8.08.0033.3.01.8	64.08.1335	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9415/8 Rev -1	TM/HM/6/15Rev-2 (2015)
381	8.08.0034.3.01.9	62.08.1032	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9415/9 Rev -1	TM/HM/6/15Rev-2 (2015)
382	8.08.0035.3.01.1	64.08.1609	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9415/9 Rev -1	TM/HM/6/15Rev-2 (2015)

383	8.08.0036.3.01.2	64.08.1181	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9415/9 Rev -1	TM/HM/6/15Rev-2 (2015)
384	8.08.0037.3.01.3	62.08.1277	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9415/9 Rev -1	TM/HM/6/15Rev-2 (2015)
385	8.08.0038.3.01.4	64.08.1622	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9415/10 Rev -1	TM/HM/6/15Rev-2 (2015)
386	8.08.0039.3.01.5	64.08.1458	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9415/10 Rev -1	TM/HM/6/15Rev-2 (2015)
387	8.08.0040.3.01.6	64.08.1745	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9415/10 Rev -1	TM/HM/6/15Rev-2 (2015)
388	8.08.0041.3.01.7	64.08.1456	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9415/10 Rev -1	TM/HM/6/15Rev-2 (2015)
389	8.08.0042.3.01.8	64.08.1330	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9415/11 Rev-1	TM/HM/6/15Rev-2 (2015)
390	8.08.0043.3.01.9	64.08.1328	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9415/11 Rev-1	TM/HM/6/15Rev-2 (2015)
391	8.08.0044.3.01.1	62.08.1223	BCM	Wear Plates / Strips of BCM (RM-80)	TM/9415/11 Rev-1	TM/HM/6/15Rev-2 (2015)
392	8.08.0045.3.01.2	64.08.5047	BCM	Corner Roller Housing of BCM	RDSO/TM/06/14	TM/HM/6/348
393	8.08.0046.3.01.3	64.08.5049	BCM	Cover Plate for Corner Roller of BCM	RDSO/TM/07/14	TM/HM/6/349

394	8.08.0047.3.01.4	64.08.5050	BCM	Scraper Shovel, Intermediate Link, Round Shaft chisel, Chain Bolt etc for BCM	TM/9302 Rev-1	TM/HM/6/111
395	8.08.0048.3.01.5	NA	BCM	Scraper Shovel, Intermediate Link, Round Shaft chisel, Chain Bolt etc for P & C Cleaner	TM/9403	TM/HM/6/39
396	8.08.0049.3.01.6	NA	SBCM	Scraper Shovel, Intermediate Link, Bolt Roller, sleeve & Bush	TM/9422/1	TM/HM/6/62
397	8.08.0050.3.01.7	64.08.5053	BCM	Base Plate, Bracket, Cap & Cotter Pin	TM/9422/2	TM/HM/6/62
398	8.08.0051.3.01.8	62.08.1174	BCM	Cutter Bar for Ballast Cleaning Machine	TM/9616	TM/HM/6/142
399	8.08.0052.3.01.9	64.08.2034HM	BCM	Tungsten Carbide Round Shaft Chisel for BCM	RDSO/TM/03/19	TM/HM/6/435
400	8.08.0053.3.01.1	64.08.5048	BCM	Bush	RDSO/TM/02/20	TM/HM/6/442
		NA	(Bush, lock	Lock Bush		
		36DIN125	bush,	Machined Washer		
		M36XDIN937	machined	Castle Nut		
		64.08.5062	washer,	Pin		
		NA	castle nut, pin & key	Key		
401	8.08.0054.3.01.2	64.08.1623-H5, RM08.25.2150.02 & 64.08.10188	BCM	Wear plates of BCM	RDSO/TM/16/22	TM/HM/6/15 Rev-2
402	8.08.0055.3.01.3	RM.08.25.2150.01	BCM	Cutter bar	RDSO/TM/03/24	TM/HM/6/553
403	8.08.0056.3.01.4	64.09.7185	BCM & FRM	Shaft for ballast distribution device	RDSO/TM/07/24	TM/HM/6/557
404	8.08.0057.3.01.5	64.08.5062 & 5052	BCM	Pin & Key for corner roller of BCM	RDSO/TM/16/23	TM/HM/6/545
405	8.08.0058.3.01.6	64.08.5048	BCM	Bush for corner roller of BCM	RDSO/TM/19/23	TM/HM/6/546
406	8.08.0059.3.01.7	64.08.5051	BCM	Bush for corner roller pin no. 1 & 5 of BCM	RDSO/TM/20/23	TM/HM/6/547
407	8.08.0060.3.01.8	64.08.1458	BCM	Side Plate ascending for BCM RM-80	RDSO/TM/22/23	TM/HM/6/15 Rev-2
408	8.08.0061.3.01.9	64.04.3256	BCM	Carrier for BCM	RDSO/TM/17/23	TM/HM/6/550
409	8.08.0062.3.01.1	64.04.3261	BCM	Carrier for BCM	RDSO/TM/18/23	TM/HM/6/550
410	8.09.0001.3.01.4	SU1702.21.1.27	FRM-80	Wear plate for cutting trough	RDSO/TM/20/17	TM/HM/6/399
411	8.09.0002.3.01.5	SU1702.21.1.28	FRM-80	Wear plate for cutting trough	RDSO/TM/21/17	TM/HM/6/399
412	8.09.0003.3.01.6	SU1702.21.3.19	FRM-80	Wear plate for cutting trough	RDSO/TM/22/17	TM/HM/6/399
413	8.09.0004.3.01.7	RE20.338 left	FRM-80	Terminal strip of cutting belt of FRM-80	RDSO/TM/23/17	TM/HM/6/400
414	8.09.0005.3.01.8	RE20.338 right	FRM-80	Terminal strip of cutting belt of FRM-81	RDSO/TM/24/17	TM/HM/6/400
415	8.09.0006.3.01.9	RE21.205	FRM	Slider for excavating chain for FRM	RDSO/TM/17/22	TM/HM/6/526
416	8.09.0007.3.01.1	RE20.1050.1	FRM	Bearing support for FRM	RDSO/TM/22/22	TM/HM/6/531
417	8.09.0008.3.01.2	64.09.5299	FRM	Wear Plate for Screen FRM-80	RDSO/TM/21/23	TM/HM/6/15 Rev-2
418	8.10.0001.3.01.5	218508	BRM	Blade Girder of (BRM)	TM/0116	TM/HM/6/270
419	8.10.0002.3.01.6	223418	BRM	Blade Girder of (BRM)	TM/0117	TM/HM/6/271
420	8.10.0003.3.01.7	400091	BRM	Blade Girder of (BRM)	TM/0118	TM/HM/6/272
421	8.10.0004.3.01.8	708222	BRM	Blade Girder of (BRM)	TM/0119	TM/HM/6/273
422	8.10.0005.3.01.9	708223	BRM	Blade Girder of (BRM)	TM/0120	TM/HM/6/274
423	8.14.0001.3.01.9	HZ60.01-3	DTS	Fork head of DGS	RDSO/TM/05/14	TM/HM/6/347

424	8.14.0002.3.01.1	GLF311.1009	DTS	Fork head of DGS.	RDSO/TM/10/14	TM/HM/6/352
425	8.17.0001.3.01.3	UD 19/17	All tampers	Suspension Bracket	TM/0121	TM/HM/6/271
426	8.17.0002.3.01.4	253.20A	CSM/WST	Bush for Shadow Board Rod	TM/0420 Rev-1	TM/HM/6/383
427	8.17.0003.3.01.5	HY30.70	All tampers	Centering Ring for Hyd Pump-DUO	TM/0446	TM/HM/6/182
428	8.17.0004.3.01.6	UD214.1515	WST	Push fork for brake cylinder of Duomatic	RDSO/TM/06/17	TM/HM/6/388
429	8.17.0005.3.01.7	WN105.50.h7.232.6.1	UNI	Pin for Lever Clamp UNI-3S	TM/0576	TM/HM/6/267
430	8.17.0006.3.01.8	UD61.2631	UNI	Pivot for driving bogie of Unimat	RDSO/TM/17/17	TM/HM/6/397
431	8.17.0007.3.01.9	E150.57	WST	Stud Bolt	TM/014/06 Rev-1	TM/HM/6/383
432	8.17.0008.3.01.1	W31.133A	UNI	Pin, Nut & Washer	TM/0555 Rev-2	TM/HM/6/246
433	8.17.0009.3.01.2	DI.20.28	All tampers	Locking Ring	TM/011/06	TM/HM/6/297
434	8.17.0010.3.01.3	2E.1202a	All tampers	Dowel Pin	TM/012/06	TM/HM/6/298
435	8.17.0011.3.01.4	UD62.216	All tampers	Pin for Shock Absorber	TM/001/06	TM/HM/6/287
436	8.17.0012.3.01.5	UD80.305	CSM	Roller	TM/004/06	TM/HM/6/290
437	8.17.0013.3.01.6	UD80.308	CSM	Pin	TM/005/06	TM/HM/6/291
438	8.17.0014.3.01.7	WN102-50h9.190.10-1	CSM/UNIMAT/09-3X/DUO	Pin for Support Clamp of CSM/UNIMAT/09-3X/DUO	RDSO/TM/07/18	TM/HM/6/418
439	8.17.0015.3.01.8	CU20.216	Unimat-4S	Cover disc for vibration drive of Unimat-4S	RDSO/TM/15/19	TM/HM/6/439
440	8.17.0016.3.01.9	E253.20a	CSM & T-Exp	P.B Bush for shadow board rod of CSM & T-Exp	RDSO/TM/04/22	TM/HM/6/383
441	8.17.0017.3.01.1	90.23.00.100	VPR machine	Conical shock absorber for VPR machine	RDSO/TM/08/22	TM/HM/6/518
442	8.17.0018.3.01.2	M18	DUO	M.S.Clamps for 18 dia hose pipe of Duomatic	RDSO/TM/13/24	TM/HM/6/563
443	8.17.0019.3.01.3	WN102.32.5h11.159.6.5.1	CSM	Pin for shock absorber of CSM	RDSO/TM/19/24	TM/HM/6/569
444	8.17.0020.3.01.4	WN102.32.5h11.189.6.5.1	CSM	Pin for shock absorber of CSM	RDSO/TM/20/24	TM/HM/6/570
445	8.17.0021.3.01.5	UD210.17	UNI	Pin for Measuring Bogie of Unimat-3S	RDSO/TM/23/23	TM/HM/6/548
446	8.17.0022.3.01.6	DL310.09	UNI, CSM & DUO	Pin for Track Lining cylinder of Unimat, CSM & Duomatic Machines	RDSO/TM/24/23	TM/HM/6/549
447	9.04.0001.3.01.9	NA	TRT	N T Rubber Pad of Track Relaying train Model P-811S	TM/9606	TM/HM/6/146
448	9.04.0002.3.01.1	40x30 M10	T-Exp, Duomatic & Unimat	Round rubber pad for T-Exp, Duomatic & Unimat	RDSO/TM/06/22	TM/HM/6/516
449	9.04.0003.3.01.2	60x40 M12	T-Exp, CSM & Unimat	Round rubber pad for T-Exp, CSM & Unimat	RDSO/TM/07/22	TM/HM/6/517

Kailash Narayan
Director Track Machine-I