

Must Change Items during POH of UTV Machine (Phooltas).

Revised by RDSO

(A) PNEUMATIC SYSTEMS

S.N	Description	Part no.	Qty	1 st POH	2 nd POH	3 rd POH
1	PNEUMATIC HOSE 6MM	UTVI PU - 01	35 Meters	√	√	√
2	PNEUMATIC HOSE 10MM	UTVI PU -02	60 Meters	√	√	√
3	PNEUMATIC HOSE 12 MM	UTVI PU -03	35 Meters	√	√	√
4	PNEUAMTIC HOSE 14 MM	UTVI PU -04	35 Meters	√	√	√
5	END FITTING – 6MM PIPE	UTVI/PU/FITTINGS - 01	20 Nos.	√	√	√
6	END FITTING – 10MM PIPE	UTVI /PU/FITTINGS -02	40 Nos.	√	√	√
7	END FITTING 12 MM PIPE	UTVI/PU/FITTINGS -03	30 Nos.	√	√	√
8	END FITTING 14 MM PIPE	UTVI/PU/FITTINGS - 04	30 Nos.	√	√	√
9	AIR STRAINER	UTVI -06 – 08/00	01 No.	√	√	√
10	'D' CHECL VALVE	UTVI -06-14/00	02 Nos.	√	√	√
11	EMERGENCY BRAKE VALVE	UTVI -06-19/00	01 No.	√	√	√
12	PRESSURE REDUCING VALVE	UTVI -06 -22/00	01 No.	√	√	√
13	AUTO DRAIN VALVE	UTVI 06 - 12/00	01 No.	√	√	√
14	EMERGENCY BRAKE VALVE	UTVI -06 – 26/00	01 No.	√	√	√
15	J ' SAFETY VALVE	UTVI – 06 – 19/00	01 No.	√	√	√
16	TRANS AIR SERVICE UNIT	UTVI – 06 -42/00	01 No.	√	√	√
17	PARKING BRAKE VALVE	UTVI -06-15/00	01 No.	√	√	√
18	2-POSSION SOL. VALVE 1/8 PORT	MFH-5-1/8	02 Nos.	√	√	√
19	DIRECTIONAL CONT. CYL. 17 MM STOCK	ADVU-32-17-APA	01 No.	√	√	√
20	DIRECTIONAL CONT. CYL. 13 MM STOCK	ADVU-32-13-APA	01 No.	√	√	√
21	DIRECTIONAL CONT. CYL. 16 MM STOCK	ADVU-32-26-APA	01 No.	√	√	√
22	THROTTLE & CHECK VALVE	6P4	01 No.	√	√	√
23	C2W RELAY VALVE	UTVI -06-13/00	01 No.	√	√	√
24	THTOTTE LEVER VALVE	UTVI -06-17/00	01 No.	√	√	√
25	SA-9 BRAKE VALVE	UTVI -06-25/00	01 No.	√	√	√
26	BRAKE CYLINDER	UTVI -06-47/00	04 Nos.	√	√	√
27	PARKING BRAKE CYLINDER	UTVI -06-46/00	02 Nos.	√	√	√
28	DIRECTIONAL CHANGE CYLINDER	UTVI -06-44/00	01 No.	√	√	√

(B) RUBBER KIT (DIAPHRAM)

1	UNLOADER VALVE	UTVI-06-KIT/UNLOADER	1 set	√	√	√
2	AUTO DRAIN VALVE		1 set	√	√	√
3	C2W RELAY VALVE	UTVI-06/KIT-C2W RELAY	1 set	√	√	√
4	SA9 AND BRAKE VALVE	UTVI-06/KIT/SA9	1 set	√	√	√
5	RUBBER BUCKET OF BRAKE CYLINDER	UTVI-06 KIT/B.CY.	4 Nos	√	√	√
6	RUBBER SNOOBER	UTVI-03 12/00	08 Nos	√	√	√
7	RADIATOR FAN BELT	178696	02 Nos.	√	√	√
8	ALERNATOR BELT	A 38	02 Nos.	√	√	√
9	BOOM PAD	150X50X10	04 Nos.	√	√	√
10	BOOM PAD	150X60X10	04 Nos	√	√	√
11	BOOM PAD	150X70X10	04 Nos	√	√	√

(C) DROP DOWN GEAR BOX						
S.N	Description	Part no.	Qty	1st POH	2nd POH	3rd POH
1	RETAINER OIL SEAL OUT PUT	30211015	02 Nos.	√	√	√
2	GASKET 0.8 THK	30516017	03 Nos.	√	√	√
3	SHIM 0.2 THK	30517021	03 Nos.	√	√	√
4	GASKET 1.6 THK	30516022	01 No.	√	√	√
5	SHIM 0.2 THK	30517019	03 Nos.	√	√	√
6	SHIM 0.5 THK	30517018	01 No.	√	√	√
7	BREATHER CUM FILTER	91500022	01 No.	√	√	√
8	PIPE ASSLY	30600002	01 No.	√	√	√
9	TAPER ROLLER BRG	90020060	02 No.	√	√	√
10	TAPER ROLLER BRG	90020061	02 No.	√	√	√
11	CYLINDRICAL ROLLER BRG	90010012	02 No.	√	√	√
12	OIL SEAL D-120X150X12.	92000112	02 No.	√	√	√
13	OIL SEAL D-15XD25X5	92000121	01 No.	√	√	√
14	O RING 1D 54.1X5.8.CS	92010096	02 No.	√	√	√
15	O RING 1D 5401X5.8.CS	92010094	04 Nos.	√	√	√
16	BALL BRG	90040036	01 No.	√	√	√
17	CIRCLIP EXTERNAL 15 TYPE A	93010039	01 No.	√	√	√
18	CIRCLIP INTERNAL 140 TYPE B	93020033	01No.	√	√	√
19	BRG BUSH	30215001	01 No.	√	√	√
20	SPACER SEAL O/P	91500012	02 No.	√	√	√
21	BREATHER CUM FILTER	91500022	01 No.	√	√	√

(D) AXLE DRIVE GEAR BOX						
S.N	Description	Part no.	Qty	1st POH	2nd POH	3rd POH
1	BRG CARRIER INPUT	30214006	01 No.	√	√	√
2	SEAL CARRIER INPUT	30211014	01 No.	√	√	√
3	SPACER SEAL INPUT	30212011	01 No.	√	√	√
4	SPACER INPUT	30213020	01 No.	√	√	√
5	DUST COVER INPUT	30218011	01 No.	√	√	√
6	INPUT FLANGE	30226002	01 No.	√	√	√
7	INPUT SHAFT	30223009	01 No.	√	√	√
8	TAPER ROLLER BRG	90020012	02 Nos.	√	√	√
9	TAPER ROLLER BRG	90020045	02 Nos.	√	√	√
10	CYLINDRICAL ROLLER BRG	90010010	01 No.	√	√	√
11	OIL SEAL 100X120X12	92000087	01 No.	√	√	√
12	OIL SEAL 200X230X15	92000086	02 No.	√	√	√
13	EXTERNAL CIRCLIP A-75	93010041	01 No.	√	√	√
14	SHIM – 0.2THK	30517003	02 Nos.	√	√	√
15	SHIM – 0.2THK	30517001	02 Nos.	√	√	√
16	SHIM 0.2 THK	30517002	02 Nos.	√	√	√
17	Gasket – 0.8 THK	30516003	02 Nos.	√	√	√
18	GASKET – 0.8THK	30516001	02 Nos.	√	√	√
19	GASKET - 0.8THK	30516002	01 No.	√	√	√
20	GASKET – 0.8 THK	30516004	01 No.	√	√	√
21	WOOLEN THREAD	9203003	100 gm	√	√	√
22	LOCK WASHER	30250001	03 Nos.	√	√	√
23	BREATHER CUM FILTER	91500067	01 No.	√	√	√

(E) FASTERNER ADGB + DDGB						
S.N	Description	Part no.	Qty	1st POH	2nd POH	3rd POH
1	SPRING WASHER B6	91330008	30 Nos.	√	√	√
2	SPRING WASHER B16	91330008	15 Nos.	√	√	√
3	SPRING WASHER B24	91330016	06 Nos.	√	√	√
4	SPRING WASHER B20	91330017	08 Nos.	√	√	√
5	SPRING WASHER B12	91330006	15 Nos.	√	√	√
6	SPRING WASHER B8	91330005	45 Nos.	√	√	√
7	SPRING WASHER B10	91330009	04 Nos.	√	√	√
8	HEX HEAD SCREW M6X15	91120010	30 Nos.	√	√	√
9	HEX HEAD SCREW M16X45	91120065	15 Nos.	√	√	√
10	HEX HEAD SCREW M20X70	91120075	08 Nos.	√	√	√
11	HEX HEAD SCREW M12X30	91120002	50 Nos.	√	√	√
12	HEX HEAD SCREW M24X240	9100094	06 Nos.	√	√	√
13	HEX HEAD SCREW M20X200	91010095	03 Nos.	√	√	√
14	HEX HEAD SCREW M8X20	91120001	50 Nos.	√	√	√
15	GRUB SCREW M20X20	91160013	02 Nos.	√	√	√
16	GRUB SCREW M20X20	91160013	02 Nos.	√	√	√
17	DOWEL DIA 12X45	30243003	02 Nos.	√	√	√
18	HEX HEAD NUT M24	30243003	02 Nos.	√	√	√
19	HEX HEAD NUT M20	91360001	05 Nos.	√	√	√
20	HEX HEAD NUT M12	91360003	15 Nos.	√	√	√
21	HEXHEAD NUT M20	91360008	03 Nos.	√	√	√
22	HEX HEAD NUT M10	91336001	15 Nos.	√	√	√
23	SPRING WAHSER B12	91330006	40 Nos.	√	√	√
24	SPRING WASHER B3/8	91330001	10 Nos.	√	√	√
25	SPRING WASHER B30	91330026	06 Nos.	√	√	√
26	HEX HEAD BOLT M20 2.5.140	91010135	03 Nos.	√	√	√
27	HEX HEAD BOLT M10X120	91010136	05 Nos.	√	√	√
28	HEX HEAD SCREW M10X55	91120069	06 Nos.	√	√	√
29	HEX HEAD BOLT M6 X 25L	91120037	04 Nos.	√	√	√
30	HEX HEAD BOLT M10X25	91122002	06 Nos.	√	√	√
31	HEX HEAD SCREW M10X25G/3/8"UNC	91050010	06 Nos.	√	√	√
32	STUD 'A' M26X2.5X802 TOTAL LENGTH	91240018	03 Nos.	√	√	√
33	HEX HEAD SCREW M12X25	91120083	05 Nos.	√	√	√
34	NIPPLE ½" BPST MALE X1/4" BSP (M) STR 2.5 THROTTLE	91500114	03 Nos.	√	√	√
35	HEX LOCK NUT M16X2X8 THK	91440008	02 Nos.	√	√	√
36	DRAIN PLUG M2X15 MAGNATE	91500017	02 Nos.	√	√	√
37	GRUB SCREW M20X20L	91160013	03 Nos.	√	√	√
38	PLUG ¼" BSPT	9150048	03 Nos.	√	√	√
39	HEX NUT M30X3.5	9360017	05 Nos.	√	√	√
40	HEX NUT M20X2.5	9360008	05 Nos.	√	√	√

(F) DRIVE LINE ITEMS						
S.N	Description	Part no.	Qty	1st POH	2nd POH	3rd POH
1	ANTI VIBRATION MOUNTING	UTVI -02-10/00	02 Nos.	√	√	√
2	ANTI VIBRATION MOUNTING	UTVI – 02-11/00	02 Nos.	√	√	√
3	ANTI VIBRATION MOUNTING	UTVI– 02 14/00	04 Nos.	√	√	√
4	BOLT 5/8” UNC -2b	UTVI 02-9/00	04 Nos.	√	√	√
5	CRADDLE SET	UTVI 02 -8/00	02 Nos.	√	√	√
6	BOLT	UTVI -02-12/00	04 Nos.	√	√	√
7	BOLT M16	UTVI -02-13/00	12 Nos.	√	√	√
8	BOLT M10	UTVI -02-16/00	16 Nos.	√	√	√
9	BOLT M12	UTVI -02-17/00	16 Nos.	√	√	√
10	SPLIT PIN	UTVI-02 -18/00	08 Nos.	√	√	√
11	BOLT	UTVI-02-22/00	06 Nos.	√	√	√
12	BOLT M16	UTVI -02-24/00	06 Nos.	√	√	√
13	SPRING WSHER	UTVI-02-25/00	04 Nos.	√	√	√
14	SPRING WAHER	UTVI-02-26/00	12 Nos.	√	√	√
15	SLOTTED NUT	UTVI -02-27/00	04 Nos.	√	√	√
16	SPLIT PIN	UTVI -02-28/00	08 Nos.	√	√	√
17	SLOTTED NUT	UTVI-02-29/00	04 Nos.	√	√	√
18	SLOTTED NUT	UTVI-02-32/00	16 Nos.	√	√	√
19	SPLIT PIN	UTVI-02-33/00	16 Nos.	√	√	√
20	SELF LOCK NUT	UTVI -02-34/00	32 Nos.	√	√	√
21	LOCK PLATE	UTVI-02-35/00	16 Nos.	√	√	√
22	BOLT	UTVI -02-36/00	08 Nos.	√	√	√
23	SPRING WSHER	UTVI-02-37/00	08 Nos.	√	√	√
24	SPRING WAHSER	UTVI-02-38/00	32 Nos.	√	√	√
25	BOLT 7/16 14UNC -2B	UTVI -02-39/00	21 Nos.	√	√	√
26	SPRING WASHER	UTVI-02-39/00	21 Nos.	√	√	√
27	SPRING WASHER	UTVI -02-40/00	21 Nos.	√	√	√
28	NUT	UTVI -02-29/00	16 Nos.	√	√	√
29	SPRING WASHER	UTVI -02-30/00	16 Nos.	√	√	√

(G) BRAKE REGGING ASSLY						
S.N	Description	Part no.	Qty	1st POH	2nd POH	3rd POH
1	BRAKE SHOE	UTVI -04-09/00	08 Nos.	√	√	√
2	SPRING SEAL	UTVI-04-13/00	16 Nos.	√	√	√
3	PIN	UTVI-04-24/00	02 Nos.	√	√	√
4	SPRING WASHER	UTVI-04-31/00	48 Nos.	√	√	√
5	COIL SPRING	UTVI-04-14/00	16Nos.	√	√	√
6	SPLIT PIN	UTVI-04-28/00	08Nos.	√	√	√
7	SPRING WASHER	UTVI-04-34/00	16 Nos.	√	√	√
8	SPLIT PIN	UTVI-04-37/00	16 Nos.	√	√	√
9	BOLT M/o	UTVI-04-38/00	16 Nos.	√	√	√
10	NUT M/o	UTVI-04-39/00	08 Nos.	√	√	√
11	SPRING WASHER M/O	UTVI-04-40/00	08 Nos.	√	√	√
12	SPLIT COTTER	UTVI-04-54/00	24 Nos.	√	√	√
13	SPLIT COTTER	UTVI-04-54/00	20 Nos.	√	√	√
14	LOCK PLATE	UTVI-04-56/00	08 Nos.	√	√	√
15	WASHER	UTVI-04-57/00	04 Nos.	√	√	√
16	WASHER	UTVI-04-58/00	16 Nos.	√	√	√
17	WASHER	UTVI-04-59/00	04 Nos.	√	√	√
18	WAHSER	UTVI-04-60/00	16 Nos.	√	√	√
19	WASHER	UTVI-04-61/00	10 Nos.	√	√	√
20	WASHER	UTVI-04-62/00	06 Nos.	√	√	√
21	SPLIT PIN	UTVI -04-63/00	04 Nos.	√	√	√
22	SPLIT PIN	UTVI-04-64/00	04 Nos.	√	√	√
23	BUSH	UTVI-04-41/00	08 Nos.	√	√	√
24	BUSH	UTVI-04-42/00	08 Nos.	√	√	√
25	BUSH	UTVI-04-43/00	48 Nos.	√	√	√
26	BUSH	UTVI-04-44/00	08 Nos.	√	√	√
27	BUSH	UTVI-04-45/00	16 Nos.	√	√	√
28	BUSH	UTVI-04-47/00	16 Nos.	√	√	√
29	BUSH	UTVI-04-48/00	16 Nos.	√	√	√
30	BUSH	UTVI-04-49/00	04 Nos.	√	√	√
31	BUSH	UTVI-04-50/00	02 Nos.	√	√	√
32	BUSH	UTVI-04-51/00	02 Nos.	√	√	√
33	BUSH	UTVI-04-52/00	04 Nos.	√	√	√
34	NUT M20X2.5	UTVI-04-53/00	16 Nos.	√	√	√

(H) AXLE BOX HOUSING						
S.N	Description	Part no.	Qty	1st POH	2nd POH	3rd POH
1	FELT RING	UTVI-01-13/00	04 Nos.	√	√	√
2	LOCK PLATE	UTVI-01-12/00	04 Nos.	√	√	√
3	SP. WASHER	UTVI-01-17/00	16 Nos.	√	√	√
4	SPLIT PIN	UTVI-01-18/00	16 Nos.	√	√	√
(I) SUSPENSION ASSLY						
S.N	Description	Part no.	Qty			
1	DUST SHIELD SPRING	UTVI-03-03/00	08 Nos.	√	√	√
2	DUST SHIELD	UTVI-03-04/00	08Nos.	√	√	√
3	GUIDE RING	UTVI-03-06/00	08 Nos.	√	√	√
4	LOWER RUBBER WASHER	UTVI-03-09/00	08 Nos.	√	√	√
5	RUBBER PACKING RING	UTVI-03-07/00	08 Nos.	√	√	√
6	COIL SPRING	UTVI-03-01/00	08 Nos.	√	√	√
(J) HYDRAULIC SYSTEM AND CRANE						
1	THRUST BEARING	2P4	01 No.	√	√	√
2	G.M BUSH	2P18	01 No.	√	√	√
3	FILTER BREATHER	4P1	01 No.	√	√	√
4	RETURN FILTER ELEMENT	4P2	01 No.	√	√	√
5	HYDEX COMPLING	4P25	01 No.	√	√	√
6	FILTER ELEMENT	4P33	01 No.	√	√	√
7	SLIDING PAD	3P28	1 SET	√	√	√
8	TOP COLLER BUSH	2P6	01 No.	√	√	√
9	SEAL SET OF COLUMN CYLINDER	2P12S	01 Set	√	√	√
10	SEAL SET OF BOOM CYLINDER	3P28S	01 Set	√	√	√
11	SEAL SET OF SLEW CYLINDER	1P15/5P10S	01 Set	√	√	√
12	SEAL SET OF 1 ST EXT CYLINDER	3P27S	01 Set	√	√	√
13	SEAL SET OF 2 ND EXT CYLINDER	3P20S	01 Set	√	√	√
14	SEAL SET FOR 3 RD EXT CYLINDER	3P19S	01 Set	√	√	√
15	¾" HYD HOSE WITH ENDS	4P4	01 No.	√	√	√
16	½" HYD HOSE WITH ENDS	4P9	01 No.	√	√	√
17	¾" HYD HOSE WITH ENDS	4P12	01 No.	√	√	√
18	¾" HYD HOSE WITH ENDS	4P19	01 No.	√	√	√
19	1" HYD HOE WITH ENDS	4P21	01 No.	√	√	√
20	½" HYD HOSE WITH ENDS	4P23	01 No.	√	√	√
21	1" HYD HOSE WITH ENDS	4P30	01 No.	√	√	√
22	½" HYD HOSE WITH ENDS	4P35	01 No.	√	√	√
23	3/8" HYD HOSE WITH ENDS	5P2	01 No.	√	√	√
24	3/8" HYD HOSE WITH ENDS	5P3	01 No.	√	√	√
25	3/8" HYD HOSE WITH ENDS	6p2	01 No.	√	√	√
26	3/8" HYD HOSE WITH ENDS	7P2	02 Nos.	√	√	√
27	3/8" HYD HOSE WITH ENDS	8P2	02 Nos.	√	√	√
28	HYD. PUMP ASSEMBLY WITH COUPLER	4P20	01 No	√	√	√
29	EMERGENCY HYD. PUMP ASSEMBLY	4P24	01 No	√	√	√

(K) ELECTRICAL ITEMS (PANEL BOARD)

S.N	Description	Part no.	Qty			
1	INDICATOR RED	UTVI-07-01/00	06 Nos.	√	√	√
2	INDICATOR GREEN	UTVI-07-02/00	06 Nos.	√	√	√
3	FOR WARD TRANS INDICATOR	UTVI-07-21/00	01 No.	√	√	√
4	REV TRANS INDICATOR	UTVI-7-21/00	01 No.	√	√	√
5	NEUTRAL TRANS INDICATOR	UTVI-07-28/00	01 No.	√	√	√
6	BATTERY CAHNGING INDICATOR	UTVI-07-23/00	01 No.	√	√	√
7	ENGINE STOP S/W	UTVI-07-24/00	01 No.	√	√	√
8	BY PASS S/W	UTVI-07-25/00	01 No.	√	√	√
9	HEAD LIGHT S/W	UTVI-07-16/0A	0 1 No.	√	√	√
10	SEARCH LIGHT S/W	UTVI-07-16/0A	02 Nos.	√	√	√
11	RED LIGHT S/W (LEFR RT)	UTVI-07-16/0A	02 Nos.	√	√	√
12	S/W WIPER MOTOR	UTVI-07-16/0A	01 No.	√	√	√
13	S/W FOG LIGHT	UTVI-07-16/0A	01 No.	√	√	√
14	S/W CAB LIGHT	UTVI-07-16/0B	01 No.	√	√	√
15	S/W CAB FAN	UTVI-07-16/0B	01 No.	√	√	√
16	D.P TOGGLE S/W (ON-OFF-ON)	UTVI-07-16/0B	05 No.	√	√	√
17	TOGGLE S/W ON -OFF	UTVI-07-16/0B	01 No.	√	√	√
18	RELAY	UTVI-09—08/00	01 No.	√	√	√
19	BUZZER	UTVI-09-13/0B	01 No.	√	√	√
20	TERMINAL STRIP	UTVI-08-03/00	04Nos.	√	√	√
21	TERMINAL STRIP	UTVI-08-05/00	01 No.	√	√	√
22	TERMINAL STRIP	UTVI-09-09/00	01 No.	√	√	√
23	COPPER CABLE 1MM 6 CORE	OHE4-11-07/02	20 METERS	√	√	√
24	COPPER CABLE 1MM 25 CORE	00HE4-11-07/01	9 METERS	√	√	√
25	COPPER CABLE 0.75 MM 3 CORE	OHE4-17-07/03	10 METERS	√	√	√
26	COPPER CABLE 2.5 MM 4CORE	OHE4-11-07/04	20 METERS	√	√	√
27	COPPERCABLE 2 CORE 1.5 MM	OHE4-11-07/05	100 METERS	√	√	√
28	COPPER CABLE 2 CORE 10MM	OHE4-1-07/06	22 METERS	√	√	√
29	COPEPER CABLE 1 CORE 10MM RED	OHE-11-07-07	5 METERS	√	√	√
30	COPPER CABLE 1 CORE 10 MM BLACK	OHE4-11-07-08	3 METERS	√	√	√
31	COPPER CABLE 2.5 MM SINGLE CORE	OHE4-11-07/13	25 METERS	√	√	√
32	COPPER CABLE 12 CORE FLEXIBLE	UTVI-02-13-07/00	25 M.	√	√	√
33	COPPER WIRE RES YELLOW SINGLE CORE FLEXIBLE	OHE4-11-07/12	60 M	√	√	√
34	SOPPER WIRE BLACK SINGLE CORE	OHE4-11-07/10	40 METERS	√	√	√
35	COPPER WIRE BLUE SINGLE CORE	OHE4-11-07/1	45 M.	√	√	√
36	TINNED WIRE RED	OHE4-17-07-31/00	70 M.	√	√	√
37	TINNED WIRE BLACK	OHE4-11-07/32	70 METERS	√	√	√
38	FERRULW A-Z 1.5 MM	OHE4-11-07/18	5 PKET	√	√	√
39	FERRUAL 0-9 1.5MM	OHE4-11-07/19	5PKET	√	√	√

276198/2020/O/O PED/TMM/RDSO

S.N	Description	Part no.	Qty	1 st POH	2 nd POH	3 rd POH
40	CABLE TIE 4" BLACK	OHE4-11-07/20	6PKET	√	√	√
41	CABLE TIE 6" BLACK	OHE4-11-07/21	3 PKET	√	√	√
42	CABLE TIE 8" BLACK	OHE4-11-07/22	3PKET	√	√	√
43	PIN TYPE COPPER LUG 2.5MM	UTVI 08MISC/ELECT/W	5PKET	√	√	√
44	MALE FEMALE CONNECTOR	UTVI 08 MISC /ELECT/F	2 PAIR	√	√	√
45	PANEL MAIN SWITCH	UTVI-07 11/00	01 No	√	√	√
46	IGNITION SWITCH	UTVI-07 26/00	01 No	√	√	√
47	TRANSMISSION POS. SELEC. SWITCH	UTVI-07 22/00	01 No	√	√	√
(L) MISC ITEMS						
1	BATTERY	12VX180 AH 13PLATE	02 Nos	√	√	√
2	SHOCK ABSORBER	UTVI-03- 17/00	04 Nos	√	√	√
3	ANTI VIBRATION MOUNTING PAD	UTVI-02-10/00	02 Nos	√	√	√
4	ANTI VIBRATION MOUNTING PAD	UTVI-02-11/00	02 Nos	√	√	√
5	ANTI VIBRATION MOUNTING PAD	UTVI-02-14/00	04 Nos	√	√	√
6	¼ "HOSE FOR DB END BEARING	UTVI-11- 02/00	01 No	√	√	√
7	¼ "HOSE FOR DB END MONIFOLD	UTVI-11- 04/00	01 No	√	√	√
8	1" HOSE FOR T.C. COOLER IN	UTVI-11- 07/00	01 No	√	√	√
9	1" HOSE FOR T.C. COOLER OUT	UTVI-11- 08/00	01 No	√	√	√